



The Critical Path in Maintenance Starts and Ends With Bolting.

TOOL MODEL: TTP-5 PRESSURE / TORQUE CONVERSION CHART

PRESSURE		TORQUE		
psi	bar	ft-lbs	kgf-m	N-m
20	1.38	1105	153	1498
25	1.72	1399	193	1897
30	2.07	1693	234	2295
35	2.41	1987	275	2694
40	2.76	2281	315	3092
45	3.10	2575	356	3491
50	3.45	2869	397	3889
55	3.79	3163	437	4288
60	4.14	3456	478	4686
65	4.48	3750	519	5085
70	4.83	4044	559	5483
75	5.17	4338	600	5882
80	5.52	4632	640	6280
85	5.86	4926	681	6679
90	6.21	5220	722	7077

