

# TORCTOOL

TOOL MODEL: TTZ-4

## PRESSURE/TORQUE CONVERSION CHART

### Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	655	91	887	104
1600	698	97	946	110
1800	785	109	1064	124
2000	872	121	1182	138
2200	962	133	1305	152
2400	1053	146	1427	165
2600	1143	158	1549	179
2800	1233	171	1672	193
3000	1324	183	1794	207
3200	1415	196	1919	220
3400	1507	208	2043	234
3600	1599	221	2168	248
3800	1691	234	2292	262
4000	1783	247	2417	276
4200	1873	259	2540	290
4400	1964	272	2662	303
4600	2055	284	2785	317
4800	2145	297	2908	331
5000	2236	309	3031	345
5200	2327	322	3154	358
5400	2418	334	3278	372
5600	2509	347	3402	386
5800	2601	360	3525	400
6000	2692	372	3649	414
6200	2784	385	3774	427
6400	2876	398	3899	441
6600	2969	411	4024	455
6800	3061	423	4149	468
7000	3153	436	4274	482
7200	3245	449	4399	496
7400	3338	462	4524	510
7600	3430	474	4649	524
7800	3522	487	4774	538
8000	3614	500	4899	552
8200	3707	513	5025	565
8400	3799	525	5150	579
8600	3892	538	5276	593
8800	3985	551	5401	607
9000	4077	564	5527	620
9200	4169	577	5652	634
9400	4261	589	5777	648
9600	4353	602	5901	662
9800	4445	615	6026	676
10000	4538	628	6151	690