

# TORCTOOL

TOOL MODEL: TTZ-8

## PRESSURE/TORQUE CONVERSION CHART

### Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	1350	187	1830	104
1600	1440	199	1952	110
1800	1620	224	2196	124
2000	1800	249	2440	138
2200	1980	274	2684	152
2400	2160	299	2928	165
2600	2340	324	3172	179
2800	2520	349	3416	193
3000	2700	373	3660	207
3200	2880	398	3904	220
3400	3060	423	4148	234
3600	3240	448	4392	248
3800	3420	473	4636	262
4000	3600	498	4880	276
4200	3780	523	5124	290
4400	3960	548	5368	303
4600	4140	573	5612	317
4800	4320	597	5856	331
5000	4500	622	6100	345
5200	4680	647	6344	358
5400	4860	672	6588	372
5600	5040	697	6832	386
5800	5220	722	7076	400
6000	5400	747	7320	414
6200	5580	772	7564	427
6400	5760	797	7808	441
6600	5940	822	8052	455
6800	6120	846	8296	468
7000	6300	871	8540	482
7200	6480	896	8784	496
7400	6660	921	9028	510
7600	6840	946	9272	524
7800	7020	971	9516	538
8000	7200	996	9760	552
8200	7380	1021	10004	565
8400	7560	1046	10248	579
8600	7740	1070	10492	593
8800	7920	1095	10736	607
9000	8100	1120	10980	620
9200	8280	1145	11224	634
9400	8460	1170	11468	648
9600	8640	1195	11712	662
9800	8820	1220	11956	676
10000	9000	1245	12200	690